



Thank you for purchasing the Bag-A-Nut Black Walnut / Pine Cone Collector. For instructions on how to adjust the spacing within your wheels please visit the website below.


<https://baganut.com/swap>

If you need any additional help, please call the manufacturer at 1(904) 641-3934 or email at [info@baganut.com](mailto:info@baganut.com)

Below you will find the parts to adjust an 18" Collector to your desired spacing. If you are adjusting the spacing on a 36" collector please use double of the suggested parts below.


### Required Parts For Spacing Your Machine to Collect Small Objects (1 1/2" to 2"):

- 11 qty - Wheels (F0034)
- 20 qty - Ejector Fingers (F0029)
- 2 qty - LARGE Ejector Fingers (F0046)
- 4 qty - Small 1/8" Snap-on Spacers (F0028)
- 8 qty - 1/8" Washer (you will need 4qty on each side of the wheel axle between the side bracket and the wheels)

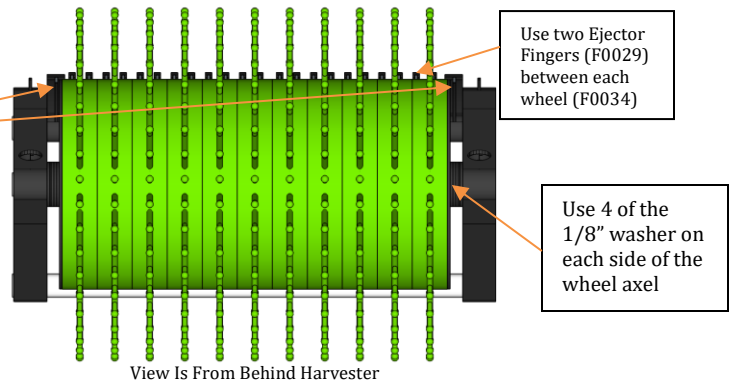

### Required Parts For Spacing Your Machine to Collect Medium Objects (2 1/4" to 3"):

- 8 qty - Wheels (F0034)
- 7 qty - Spacer Wheel - Black (F0043)
- 14 qty - Ejector Fingers (F0029)
- 1 qty - LARGE Left Ejector Finger (F0229 "Left")
- 1 qty - LARGE Right Ejector Finger (F0229 "Right")
- ~6 qty - Small 1/8" Snap-on Spacers (F0028)
- ~8 qty - Large 3/4" Snap-on Spacers (F0027)
- 4 Qty - Large/Thick 1/8" Washer (You will need 2qty on each side of the wheel axle between the side bracket and the wheels)

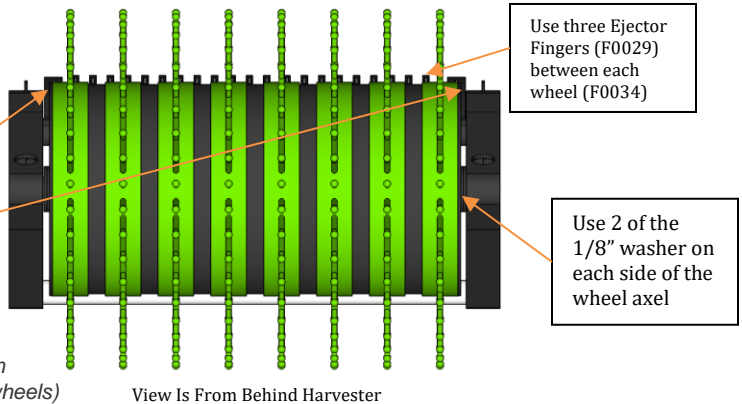

### Required Parts For Spacing Your Machine To Collect Large Objects (3 1/4" to 4"):

- 6 qty - Wheels (F0034)
- 10 qty - Spacer Wheel - Black (F0043)
- 15 qty - Ejector Fingers (F0029)
- 2 qty - LARGE Ejector Fingers (F0046)
- ~2 qty - Small 1/8" Snap-on Spacers (F0028)
- ~6 qty - Large 3/4" Snap-on Spacers (F0027)
- 10 qty - 1/8" Washer (you will need 5qty on each side of the wheel axle between the side bracket and the wheels)

