




## Handle instructions for 36" push models

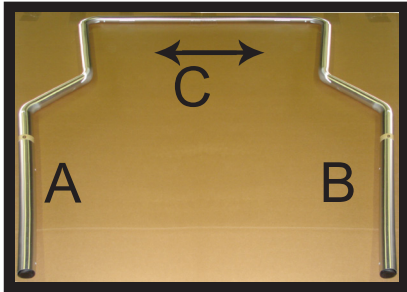


**1** Place pipe pieces on a flat surface as shown; Part C slides into the open ends on parts A and B.

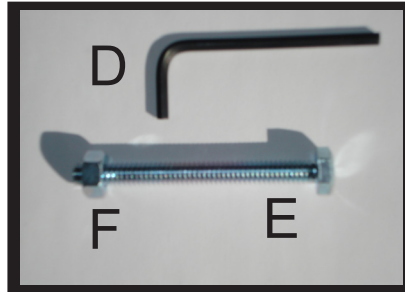


**2** To join the three parts, remove tape from set screws and tighten them into parts A and B using the provided 1/8" Allen Key (D).

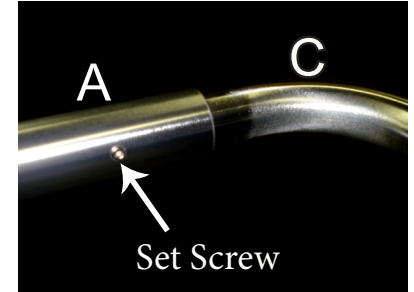


Set screws are on the ends that are not plugged.

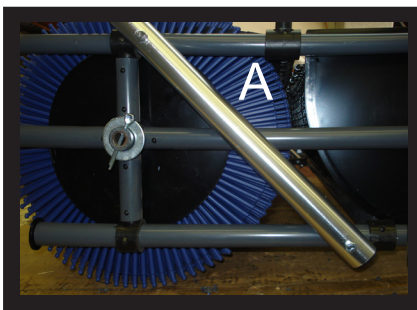


**3** Match side A of the handle to side A of the machine frame. The handle should be at a 45° angle away from the collection basket end of the machine.

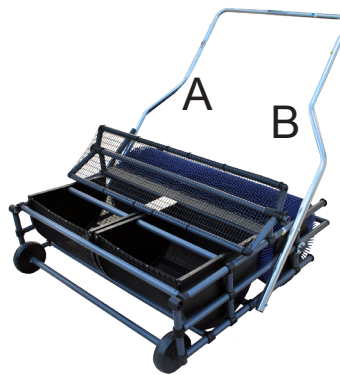


Match side B of the handle to side B of the machine's frame.

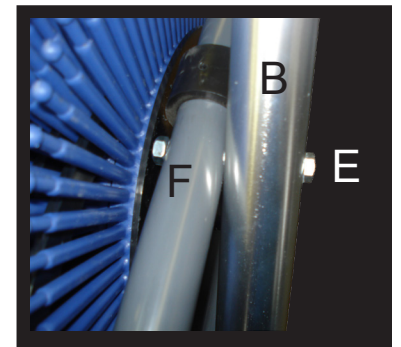

**4** Slide the 2 1/2" x 1/4" hex bolts (E) through the holes on the outside of the handle. Then, push the bolts through the pre-drilled holes in the frame of the machine. You may need to gently tap the bolts through.

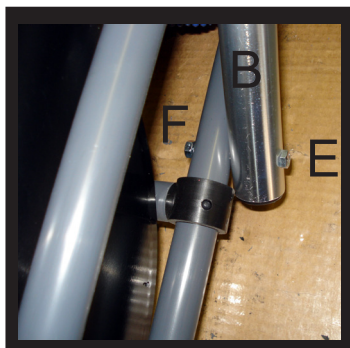

Tighten the 4 hex nuts (F) with a 7/16" wrench to the 4 hex bolts (2 per side) (E) that were just inserted.

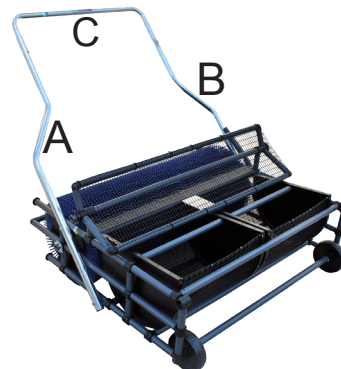

**5** Finished unit should look as shown.